

Palax Power 100 splitting valve basic adjustment

Close cover over splitting zone, adjust log cutting length to shortest position (25cm) and shut down the machine. Remove front cover and check that part 2 is well tightened by screw 3. Then check that there is little (2-3mm) gap between parts 1 and 2. The gap can be adjusted from two places. First lose screw number 5 and press part number 6 down. Then adjust the gap by screwing part 4 on the other side of machine. Then lift part 7 up (until it stops) and also lift part 6 against it and then tighten screw number 5.

